


# THERMAL LABEL PRODUCT HANDLING INSTRUCTIONS

The proper storage of thermal labels or paper is essential for successful imaging, processing, and end use performance. For optimum performance, we recommend the following:



## **Avoid Exposure to UV Lighting & Sunlight**

Store labels in a covered box. Thermal labels can turn dark after exposure to light. This may impair readability or color clarity. Covering labels that are not in use is strongly recommended.

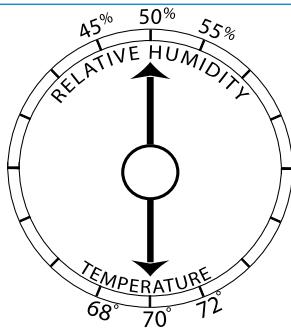

## **Temperatures & Humidity Conditions**

Labels should be stored at 68°F to 72°F and 50% relative humidity. Storing labels away from sources of heat and moisture will prevent curling or puckering of your labels.



## **Thermal Labels on a Roll**

If your thermal labels are produced in a roll form, they are attached to the core with a special glue. This special glue disappears so that all of the labels are usable and can run through your thermal printer.

## **Applications of Thermal Labels to Plastics for Extended Time**

Plastics and thermal labels can chemically interact and cause thermal imaging to fade over time. In applications where the labels must be readable/scannable for a long time, avoid application to plastic.

**All efforts have been made to ensure a one-year shelf life of your labels. However, failure to follow the recommended procedures can shorten the shelf life of your thermal labels.**

Questions? Contact us today!

27770 N. Entertainment Dr., Ste. 200  
Valencia, CA 91355  
Tel 800.435.4242 or 661.257.0233  
Fax 800.321.4409  
[www.pdchealthcare.com](http://www.pdchealthcare.com)

Where positive identification  
meets safe, efficient patient care.

  
Healthcare  
A Brady Business   
HC-482-0515